

# GIANT DECKCHAIR

## FITTING AND SAFETY MANUAL

Thank you for your trust and purchase of our product.



**IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY!  
KEEP THEM SAFE FOR FUTURE REFERENCE!**

Before assembling your deck chair, please read these instructions carefully in order to assemble it properly.

### PURPOSE:

The deck chair is to be used indoors and outdoors.  
The deck chair is for 3-4 people.

### OVERALL DIMENSIONS:

250x170x10cm

The maximum total statistical weight capacity of the deck chair is 4000N (400kg). If the total combined weight of seated persons exceeds this limit, limit the number of users accordingly. The deck chair is available with individual advertising prints. Before using the product, it is essential to read the following safety instructions. If you have any doubts about how to use the deck chair, do not use it; instead, seek advice from the manufacturer or distributor.

## Fitting of the deck chair

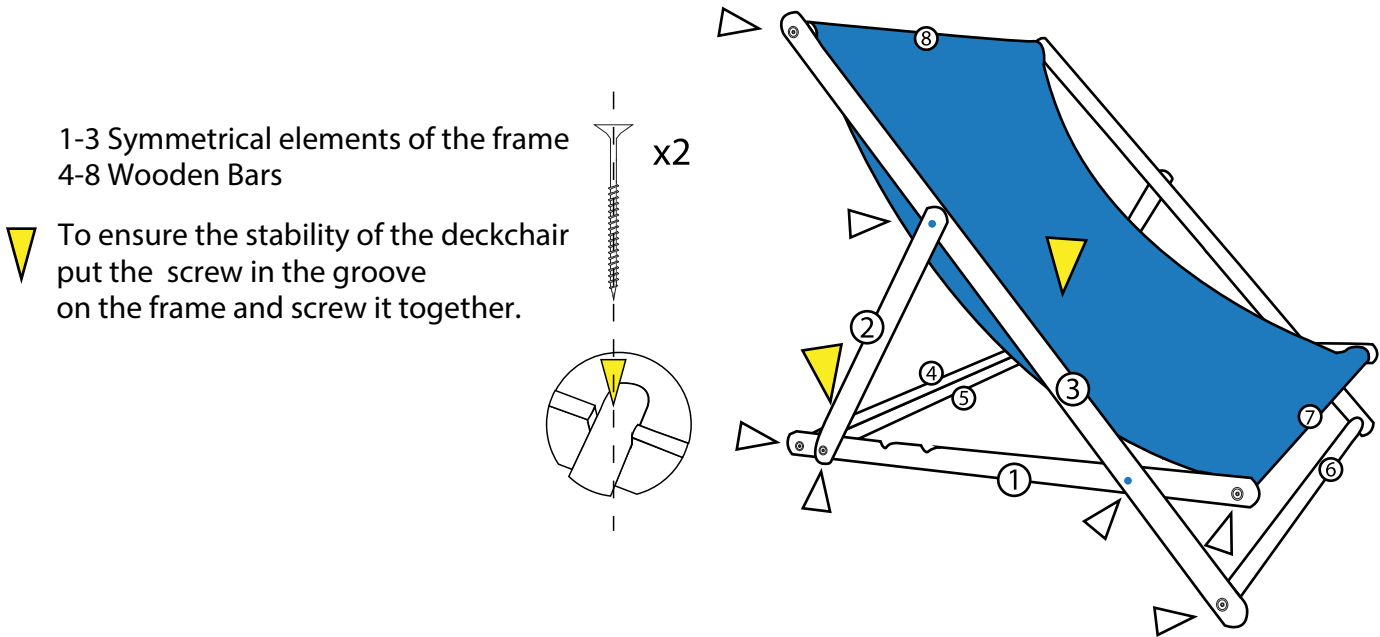
Assemble the deck chair on an flat surface.

It is unacceptable to assemble deckchair on a sloping, grassy surface or in strong winds due to the risk of losing elements or incorrect assembly of the structure.







At least two people are required for assembly!






Children cannot stay near the assembly site.

 Please unpack the product and then follow the instructions below.



Pic. 1. Elements of the frame

Package no.1			
<b>Frame</b> 6 pcs of wooden slats 	<b>Fabric</b> 1 pcs of fabric 	<b>A set of tools</b> 1 Screwdriver PH2  1 pcs Torx t40 	<b>Screws</b> 10 pcs 8x160 mm  2 pcs 4,5x90 mm 

Package no.2		
Wooden bars		
1 pcs wooden bar (161 cm Ø7)- PART NO.8 	1 pcs wooden bar (151,5 cm Ø7)- PART NO.7 	1 pcs wooden bar (170,5 cm Ø5)- PART NO.5 
1 pcs wooden bar (161 cm Ø5)- PART NO.6 	1 pcs woodenbar (151,5 cm Ø5)-PART NO.4 	



Pic 2. Each end of the beam is marked with its corresponding location on the frame.

1. Place the deckchair frame (parts 1-2-3) on a flat surface
2. Place the corresponding beams into the holes drilled in the frame. (pic. 2)
3. Put the top pocket of fabric over wooden bar #8, and the bottom pocket over wooden bar #7
4. Place the second part of the frame (parts 1-2-3) on the ends of the beams (parts 4-5-6-7-8)
5. Fasten the frame with the beams using 160mm screws. (pic. 1)
6. To ensure the stability of the deckchair put the screw in the groove on the frame and screw it together.(pic. 1)

**The deckchair position must be secured with ground anchors or weighted bags (anchors and weight are not included in the set)**

### SAFETY INSTRUCTION

Children under 18 years of age may only use the giant deckchair if accompanied and under the supervision of an adult guardian.

The GIANT DECKCHAIR should only be used for its intended purpose. It is designed to be used at temperatures ranging from 5 to 40°C and in relative humidity conditions not exceeding 70%. To ensure its longevity, the furniture should be protected from adverse weather conditions such as rain, frost, wind, and strong sunligh.

After use, whether folded or unfolded, the deck chair must be securely stored in a roofed, clean, and dry location to protect it from adverse weather conditions.

Under no circumstances should the deck chair be left unattended or used in strong, gusty winds.

This product is intended for use only on a flat, horizontal surface.

Please note that the BIG deck chair should not be used on sloped ground.

Ensure that the deck chair is not placed closer than 2.5m from active gas heaters or fire sources to prevent the risk of spontaneous combustion

Avoid prolonged contact of painted wooden surfaces with very high temperatures, as this may cause changes in the color of the varnish coat, leading to discoloration and a dull appearance.

The varnished surfaces of the furniture should be protected against scratches and hitting.

Do not put hot objects or chemical substances on the deck chair.

When moving the deck chair, protect it against mechanical damage.

The deckchair is packed in cardboard and stretch foil. After removing from the packaging, all parts should be screwed together according to the instructions in the appendix. Recycle cardboard and foil. The deckchair has a three-step adjustment of the seat back angle. The BIG wooden lounger has rounded or beveled edges and corners.

In order to maintain the color and durability of wooden elements, we recommend maintenance with water-based products (3V3 varnish) at least once a year.

Use the product on a hard, horizontal surface to avoid slipping of the elements connecting the deckchair.

The fabric used is water resistant, but it is not waterproof, so leaving it in heavy rain for a long time causes it to become soaked.

The print on fabric exposed to long-lasting, intensive UV radiation can be affected with slight fading or, in the case of white with yellowing.

The deck chair cannot be often assembled and disassembled as it weakens its structure and affects stability and security of use.

### **IT FORBIDDEN**

- standing on the back bar of the slatter used to adjust the reclining degree of the backrest or on either wooden element of the deck chair structure!
- standing on the upper beam of the deck chair on which fabric is mounted!
- moving or lifting the deck chair with people or objects is prohibited!
- replacing the connecting bolts while using the deck!

Periodically check the condition of fasteners and tighten bolts or nuts if necessary.

In the event of: product defects, cracks in the textile surface or wearing parts or loose parts, for the safety of the user, the product should be withdrawn from use immediately.

Pregnant women should be especially careful when using a lounger due to difficulties in getting up. Intoxicated persons are not allowed to use the deckchair.

During assembly or use, do not insert legs or arms between the side surfaces of the supporting structure frame.

### **RISK OF INJURY**

During use, do not climb on the fabric or lean out of the lounger, as you may lose stability, fall or hit other people sitting on the lounger.

Before use, always check that there is a rear beam that determines the position of the lounger in the right place at the same drape level.

If you use securing screws, check the correct positioning of the beam.

## **MAINTENANCE**

All wooden elements of the deckchair are treated.

In order to extend its lifetime, it is necessary to impregnate the wood regularly at least once a year using a wood glaze.

Small stains may be removed with a damp cloth.

Do not use pressure washers, solvents or wire brushes to clean the deck chair.

Storage of deckchair is not allowed. Before packing, dry them thoroughly.

If the fabric gets dirty, wipe it with a damp cloth moistened with washing liquid to remove minor dirt;

The fabric is removable and washable in the washing machine at 40 C degrees.

## **WARRANTY**

- 12 months for wooden structures
- 6 months for the fabric,
- 6 months for print on the fabric,
- Warranty replacement/repair takes place after checking whether the deckchair was used in accordance with its intended purpose.

A complaint is only possible after receiving photos showing the product defect.