


ROLLER BANNER INSTRUCTIONS


Pop up your banner in under 60 seconds

We have several cassette models, all of which work in the same way as these instructions.


ASSEMBLY

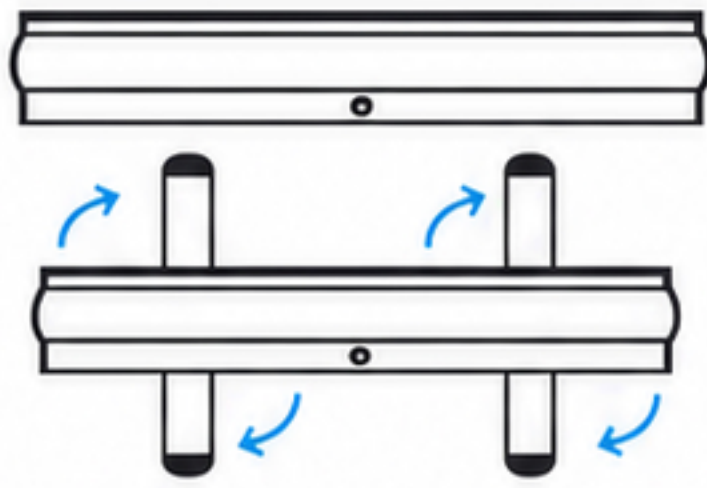


1. Remove your roller banner from the case.
2. Turn the feet on the metal cassette around, so that your banner can stand up.
3. Place it on an even floor surface.

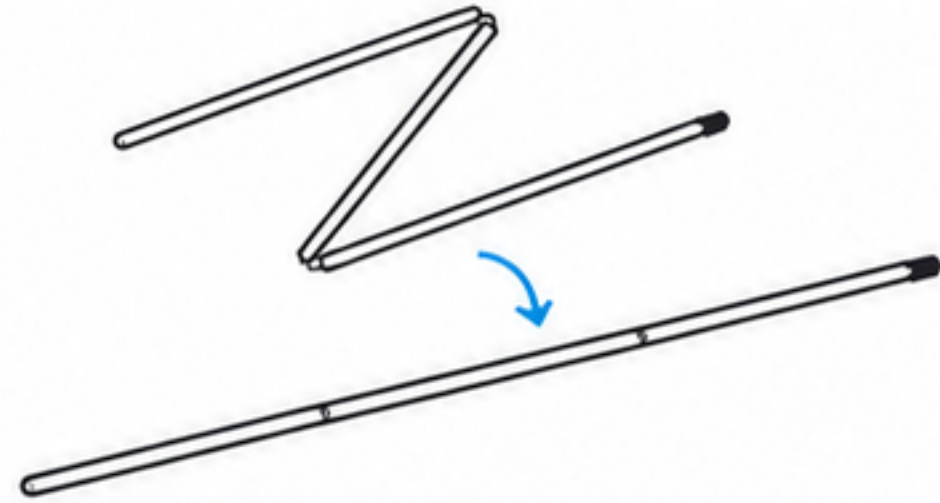

4. Remove the pole from the case and extend it to full length.
5. With the banner graphic facing away from you, place your foot on one of the feet.

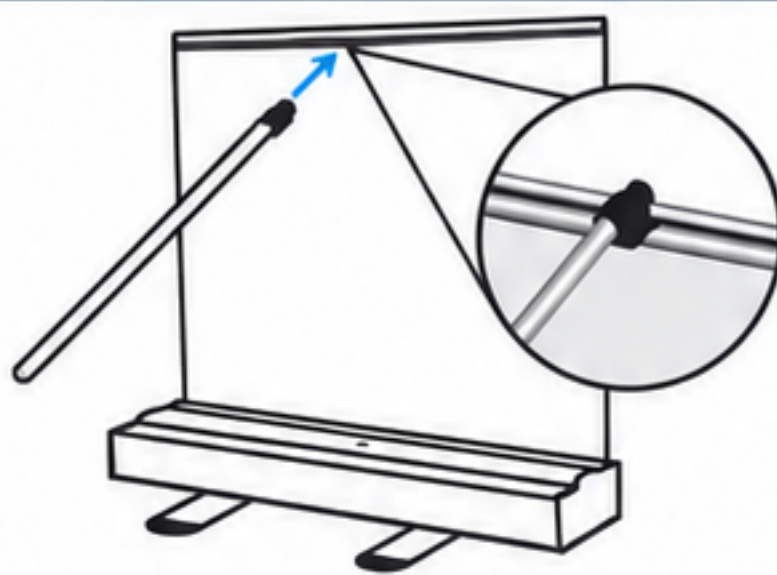

6. Pull up the roller banner to chest height.
7. Insert the pole connector into the bar at the top of the banner.

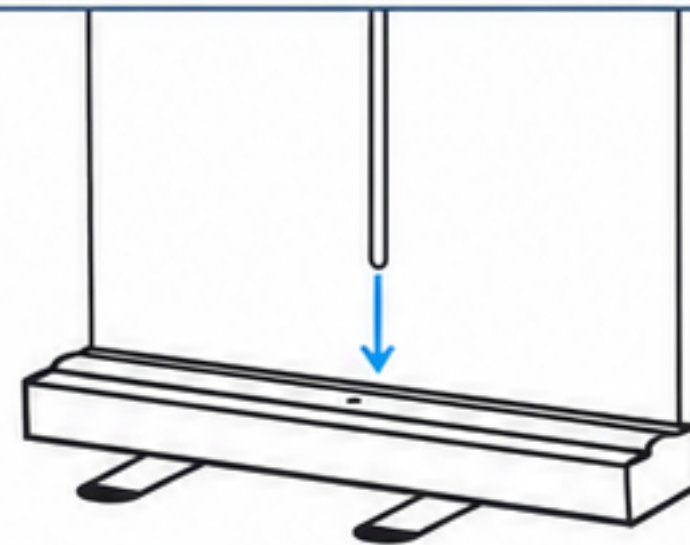


8. Use the pole to finish extending the roller banner to full height.
9. Secure the other end of the pole into the metal case at the base of the banner.

WARNING


Please take care when putting up your roller banner.

When rolling up, do not release banner until fully retracted in metal casing, failure to do so may result in damage to the banner.


DISASSEMBLY

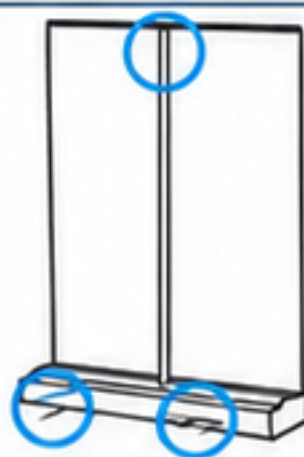


1. Hold the top of the banner with one hand.
2. Place your foot on the foot of the metal cassette for stability.

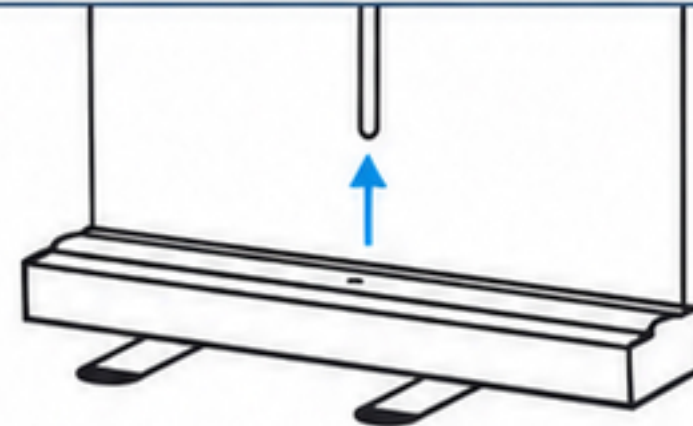

3. With the other hand, remove the end of the pole from the metal case - but keep the top of the pole connected with the banner.
4. Gently roll the banner down to chest height.

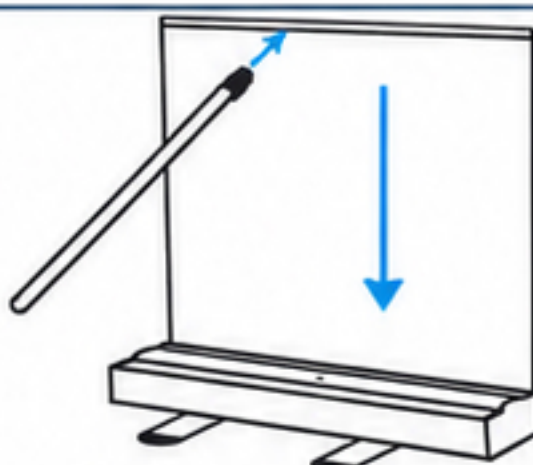

5. Remove the pole from the top of the banner.
6. Gently lower the banner back into the case.

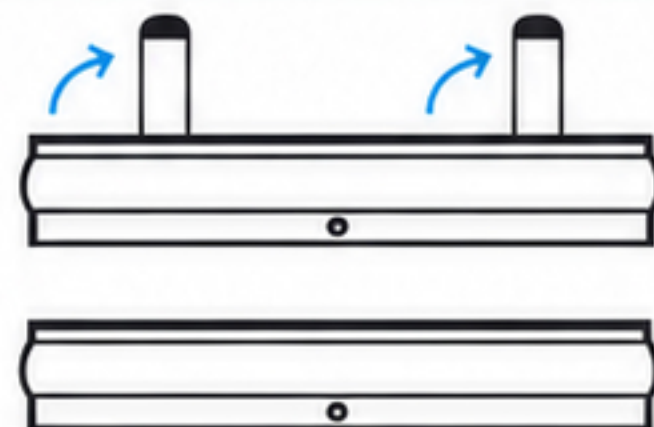

7. Turn the feet back in, and place banner and pole back into travel case.