

Nobori Flag Assembly Instructions

A quick setup guide for Sailflags pongee Nobori flags with sewn fabric loops, a top arm with end clip and weighted base.

Before you start

Lay all parts out on a clean surface and check you have everything needed before assembly.

Parts included:

- Printed pongee Nobori flag
- Black vertical telescopic pole
- White horizontal top arm with end clip
- Sewn fabric loops on the flag
- Weighted base

Useful setup notes:

- No tools are normally required
- The loops are sewn to the flag; push the pole through the loops - do not wrap loops around the pole
- Do not force poles, clips or collars
- Keep the fabric away from rough floors and sharp edges

Important: Nobori flag loops are sewn directly to the flag fabric. The vertical pole and top arm must be pushed through these loops during assembly.



Assembly steps

1

Position and fill the base

Place the base on a level surface. If using a water-fillable base, fill it before the flag is raised. For outdoor use, add extra stability where appropriate.

2

Prepare the vertical pole

Push the lower pole section firmly into the base. Keep the pole low enough to work with comfortably before fully extending it.

3

Push pole through sewn side loops

The fabric loops are sewn directly to the flag. Push the vertical pole through each side loop from top to bottom. Do not wrap the loops around the pole.

4

Push top arm through top loops

Slide the white horizontal top arm through the sewn loops along the upper edge of the flag, keeping the artwork facing the required direction.

5

Clip top arm onto final loop

The top arm has a clip on the end. Clip this onto the final sewn loop at the outer end of the flag to keep the top edge supported and stop the flag sliding along the arm.

6

Raise and final check

Extend the pole to the required height and tighten collars by hand. Check the flag hangs flat, the base is stable, the pole has passed through all sewn loops, and the top-arm end clip is secured to the final loop.

Care and safety

Remove the flag in strong winds, heavy rain or when the display is unattended for long periods. Allow wet fabric to dry before storage. Wipe poles clean and store the flag folded loosely in a dry place.

Print options note

Standard print: strong colour on the front with mirrored show-through on the reverse.
Double-sided print: artwork is readable and vibrant on both sides, with an internal liner to reduce show-through.